


APPLICATIONS:

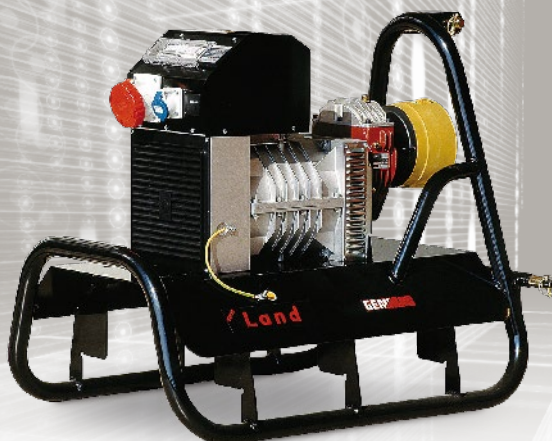

MODEL	230V 1PH Single-phase	400V 3PH Three-phase	ALTERNATOR		TRACTOR POWER	PTO	OIL CAPACITY	L W H			Kg	IP	
	PRP kW	PRP KVA	type	RPM	HP	speed RPM	l	L cm	W cm	H cm			
Land TR17	5,3	16,0	2 poles, Compound	3000	49	430	0,5	95,5	83,3	91,5	125	23	
Land TR27	9,0	27,0	2 poles, Compound	3000	83	430	0,5	116	83,3	91,5	149	23	
Land TR38	12,7	38,0	2 poles, Compound	3000	112	430	0,5	116	83,3	91,5	205	23	
Land TR27	9,0	27,0	4 poles, Compound	1500	80	430	0,5	116	83,3	91,5	200	23	
Land TR30	10,0	30,0	4 poles, Compound	1500	87	430	0,5	116	83,3	91,5	215	23	
Land TR19	6,3	19,0	2 poles, AVR	3000	60	430	0,5	95,5	83,3	91,5	124	23	
Land TR25	8,3	25,0	4 poles, AVR	1500	77	430	0,5	116	83,3	91,5	205	23	
Land TR30	10,0	30,0	4 poles, AVR	1500	92	430	0,5	116	83,3	91,5	228	23	
Land TR45	18,0	45,0	4 poles, AVR	1500	128	430	0,5	116	83,3	91,5	258	23	
Land TR50	16,7	50,0	4 poles, AVR	1500	144	430	0,5	116	83,3	91,5	298	23	
Land TR65	21,7	65,0	4 poles, AVR	1500	202	400	2	121	97,5	92,3	335	23	
Land TR80	26,7	80,0	4 poles, AVR	1500	247	400	2	121	97,5	92,3	362	23	
Land TR93	31,0	93,0	4 poles, AVR	1500	285	400	2	121	97,5	92,3	382	23	

*AVR with brushes.

NB. PTO shaft and cable not included.



Picture as a way of exemple.

Standard Equipment:

- Magnetothermal Switch;
- Earth Fault Breaker;
- Voltmeter;
- Ammeter (Optional on TR17);
- Frequencymeter;
- Hour Meter (Optional on TR17);
- TR17: 1x CEE 16A 230V, 1x CEE 32A 400V;
- TR19/25: 1x schuko, 1x CEE 32A 230V, 1x CEE 32A 400V;
- TR20/24/27/38/30: 1x CEE 16A 230V, 1x CEE 63A 400V;
- TR45: 1x schuko, 1x CEE 32A 230V, 1x CEE 63A 400V;
- TR50/65/80/93: 1x schuko, 1x CEE 32A 230V, 1x CEE 125A 400V.