ASSEMBLING THE CUTTER RAPIDCUT -10 GB

*—The details in this manual are simply for information
*—The manufacturer may modify this manual without being liable for the damage cause

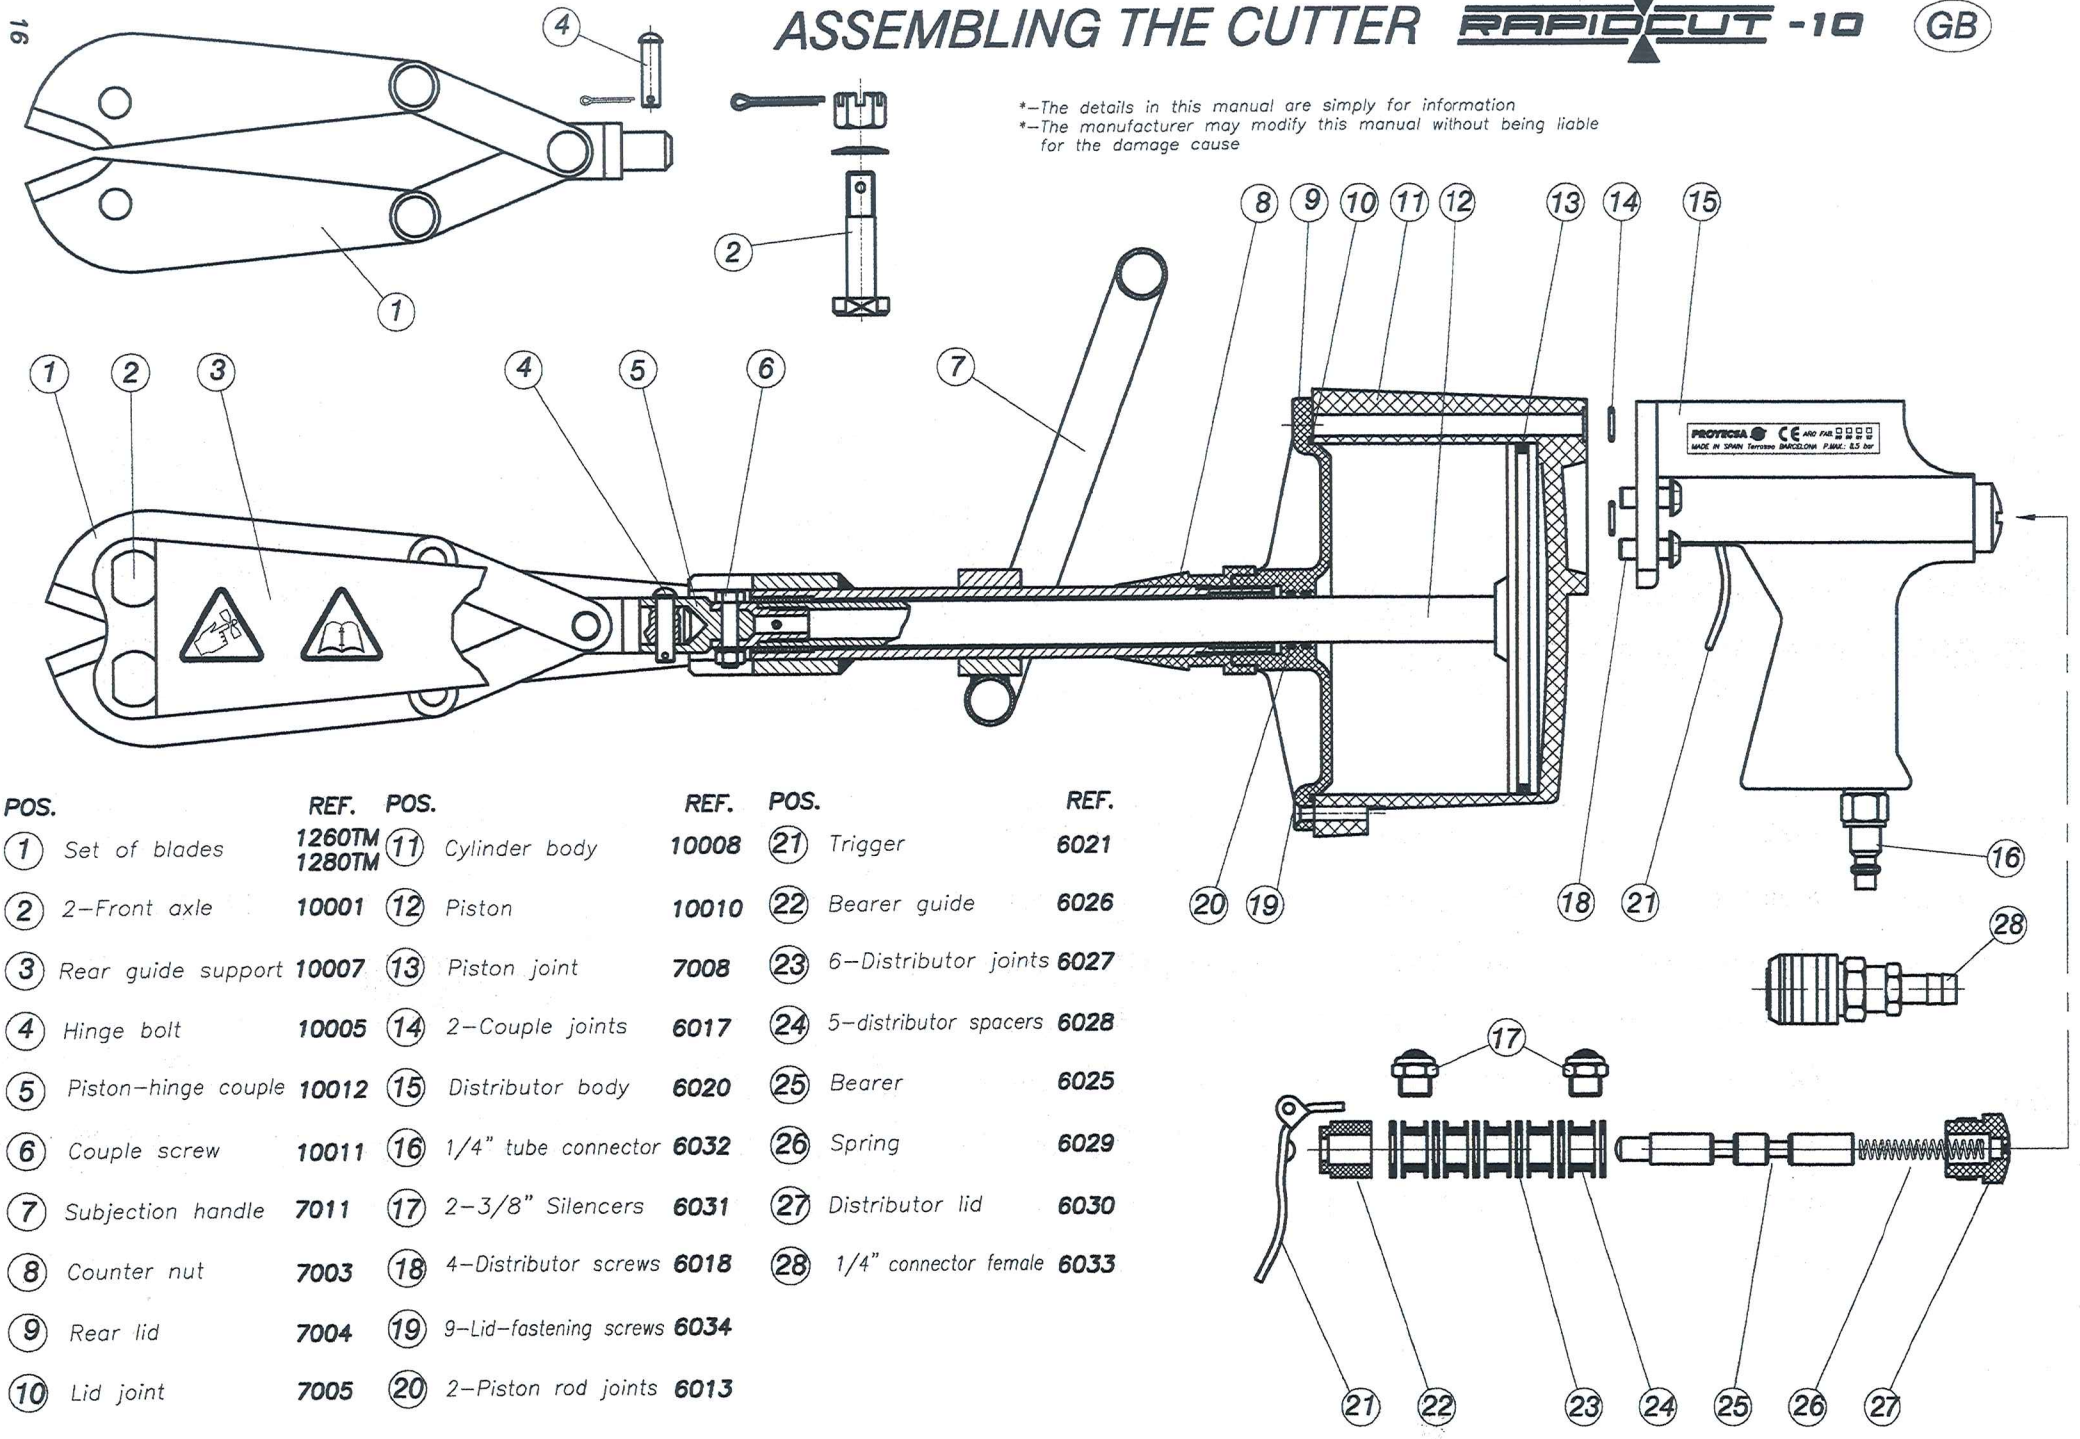

POS.		REF.	POS.		REF.	POS.		REF.
1	Set of blades	1260TM 1280TM	11	Cylinder body	10008	21	Trigger	6021
2	2—Front axle	10001	12	Piston	10010	22	Bearer guide	6026
3	Rear guide support	10007	13	Piston joint	7008	23	6—Distributor joints	6027
4	Hinge bolt	10005	14	2—Couple joints	6017	24	5—distributor spacers	6028
5	Piston—hinge couple	10012	15	Distributor body	6020	25	Bearer	6025
6	Couple screw	10011	16	1/4" tube connector	6032	26	Spring	6029
7	Subjection handle	7011	17	2—3/8" Silencers	6031	27	Distributor lid	6030
8	Counter nut	7003	18	4—Distributor screws	6018	28	1/4" connector female	6033
9	Rear lid	7004	19	9—Lid—fastening screws	6034			
10	Lid joint	7005	20	2—Piston rod joints	6013			