

# EDILGRAPPA

**CE**

## **CORDLESS SHEAR F130N T30 18V Li-Ion WITH ADJUSTABLE HEAD**



©

No part of this manual may be reproduced or translated without the written permission of the owner. The information and illustrations contained in this manual are purely indicative. Edilgrappa S.r.l. reserves the right to modify the machine without notice.



## **USE AND MAINTENANCE INSTRUCTIONS**



## COMBI TOOL

AVAILABLE IN THE FOLLOWING VERSIONS:

- 18V DIRECT CURRENT MOTOR

FIXED HEADS AVAILABLE	NAME OF MACHINE	P/N
SHEAR	CORDLESS SHEAR F130N T30 18V Li-Ion WITH ADJUSTABLE HEAD	1.50.2521

# CONTENTS

<b>Chap. 0 GENERAL INFORMATION .....</b>	<b>6</b>
0.01 FOREWORD	6
0.02 CONDITIONS OF SALE AND WARRANTY	6
0.03 SPECIAL SYMBOLS	7
0.04 SAFETY AND DANGER STICKERS - CE PLATE	8
0.05 LIST OF ACCESSORIES INCLUDED IN THE SUPPLY	9
<b>Chap. 1 REFERENCE LEGISLATION .....</b>	<b>9</b>
1.01 GENERAL	9
<b>Chap. 2 GENERAL SAFETY WARNINGS FOR ELECTRICAL TOOLS .....</b>	<b>9</b>
2.01 SAFETY OF THE WORK STATION	9
2.02. ELECTRICAL SAFETY	11
2.03 PERSONAL SAFETY	11
2.04 USE AND MAINTENANCE OF ELECTRIC TOOLS	12
2.05 ASSISTANCE	12
2.06 SPECIFIC OPERATING INSTRUCTIONS	12
<b>Chap. 3 DESCRIPTION OF MACHINE .....</b>	<b>14</b>
3.01 MACHINE COMPONENTS	14
<b>Chap. 4 TECHNICAL SPECIFICATIONS .....</b>	<b>15</b>
4.01 HYDRAULIC, MECHANICAL AND ELECTRICAL SPECIFICATIONS	15
<b>Chap. 5 DELIVERY, COMMISSIONING AND SET-UP .....</b>	<b>16</b>
5.01 DELIVERY	16
5.02 CHARGING THE BATTERY	16
5.03 INSTALLING THE BATTERY	17
5.04 COMMISSIONING	18
5.05 EQUIPMENT OPERATION	18
5.05.01 START-UP	18
5.05.02 CUTTING PHASE	19
5.05.05 ADJUSTING THE HEAD	21
5.06 ON/OFF TRIGGER	23
5.07 RUNNING DOWN THE BATTERY	24
5.08 FORESEEN USE AND RESIDUAL RISKS	24
5.09 SAFETY DEVICES	25
<b>Chap. 6 ROUTINE MAINTENANCE .....</b>	<b>25</b>
6.01 CHANGING AND TOPPING UP THE OIL	26
6.02 CHECKING SCREWS	28
6.03 CHECKING THE BLADES	28
6.04 HYDRAULIC COMPONENTS	28
6.04.01 MAX. PRESSURE VALVE INCORRECTLY ADJUSTED	28
6.05 MAIN CHECKS ON THE MOTOR	28
6.06 GREASING OF CENTRAL PIN	28

**Chap. 7 TROUBLESHOOTING ..... 29**

- 7.01 GENERAL ..... 29
- 7.02 TROUBLESHOOTING THE MOTOR ..... 29
- 7.03 TROUBLESHOOTING THE HYDRAULIC COMPONENTS ..... 30

**Chap. 8 STORAGE AND RESTARTING ..... 31**

- 8.01 STORAGE ..... 31
  - 8.01.01 ELECTRIC MOTOR ..... 31
  - 8.01.02 CYLINDER AND HYDRAULIC COMPONENTS ..... 31
- 8.02 RESTARTING ..... 31

**Chap. 9 DISPOSAL ..... 32**

**Chap. 10 SPARE PARTS AND ACCESSORIES CATALOGUE ..... 32**

- 10.01 ORDERING INFORMATION ..... 32
- 10.02 MECHANICAL AND HYDRAULIC COMPONENTS ..... 33
- SHEAR BLADES CUTTER F130N      P/N 150.03224 ..... 33**
- SHEAR BLADES CUTTER F130N      P/N 150.03224 ..... 34**

**Chap. 11 DECLARATION OF CONFORMITY ..... 37**

## **Chap. 0 GENERAL INFORMATION**

### **0.01 FOREWORD**

This manual was drawn up to allow customers to optimise machine operation and should therefore be read in its entirety before use.

The following chapters contain useful use and maintenance information. **Knowledge and scrupulous observance of current occupational safety and plant engineering legislation is a fundamental requirements for correct use.** Cost-saving and regular and safe machine operation can be achieved through rational use and careful maintenance. In case of faults or inefficient operation, call in specialist staff and order original spare parts from the maker, its technical assistance network and its technicians.

This manual forms an integral part of the machine. Users must scrupulously follow all the instructions it contains.

As the contents of this manual may change over time following modifications to reference legislation and/or technical improvements deriving from technological developments, its validity is determined from the date it was issued.

Pursuant to EEC Directive 85/374, the machine maker is not liable for harm to people, property or animals deriving from the negligent use or installation of the machine or failure to observe legislation. The maker also declines all liability if the machine is tampered with, if original parts are modified or if the machine is damaged due to incorrect storage or transport operations.

In thanking you for the preference shown to our company, please rest assured we will do our utmost to enhance the efficiency of our service and improve the quality and performance of our products and accessories according to our know-how and your requirements.

### **0.02 CONDITIONS OF SALE AND WARRANTY**

Starting from the date of delivery, the Maker grants the purchaser a 24 (twenty-four) month warranty covering product quality and performance as follows:

**The warranty certificate must be compiled and returned to the Maker within 10 days from the date of delivery of the product.**

The warranty covers faulty spare parts but does not comprise labour and any transport costs.

Repairs will only be made under warranty if manufacturing faults are found or if the quality of the material is poor.

The warranty shall automatically expire if the fault is caused by:

- a fault in the electricity supply
- tampering, repairs or modifications without our permission
- improper use of the machine
- prolonged use without observing the pauses required for cooling
- forcing or wear caused by prolonged use
- no maintenance
- use on excessively hard or thick material
- incorrect positioning during processing.

Machine downtime for repairs under warranty is up to 10 days unless written notification to the contrary is received.

No damage deriving from machine downtime or damage caused to third parties shall be recognised. The following product is compliant with Italian Ministerial Decree of 9/10/80.

### 0.03 SPECIAL SYMBOLS

A brief legend indicating the most important symbols used in this manual is shown below.



**ATTENTION DANGER:** highlights situations or problems that could lead to injury or death.



**IMPORTANT:** highlights situations and problems connected with the efficiency of the machine that do not affect personal safety.

**BEFORE WORKING ON THE MACHINE, CAREFULLY READ ALL THE INSTRUCTIONS, ESPECIALLY THOSE CONTAINED IN BOXES**

**“OPERATOR”:**

A person suitably trained and authorised to operate, adjust, clean and transport the machine.

**“MAINTENANCE PERSON”:**

A person trained and authorised to perform routine maintenance on the machine and replace certain components.

**“MACHINE”:**


The equipment described in this manual

**“ELECTRIC TOOL”:**

Used in the safety precautions, it is a more general definition of the machine in question as it refers to mains-powered electric tools (with cable) or battery-powered electric tools (cordless).

## 0.04 SAFETY AND DANGER STICKERS - CE PLATE

Position of plate and safety and danger stickers on the machine:

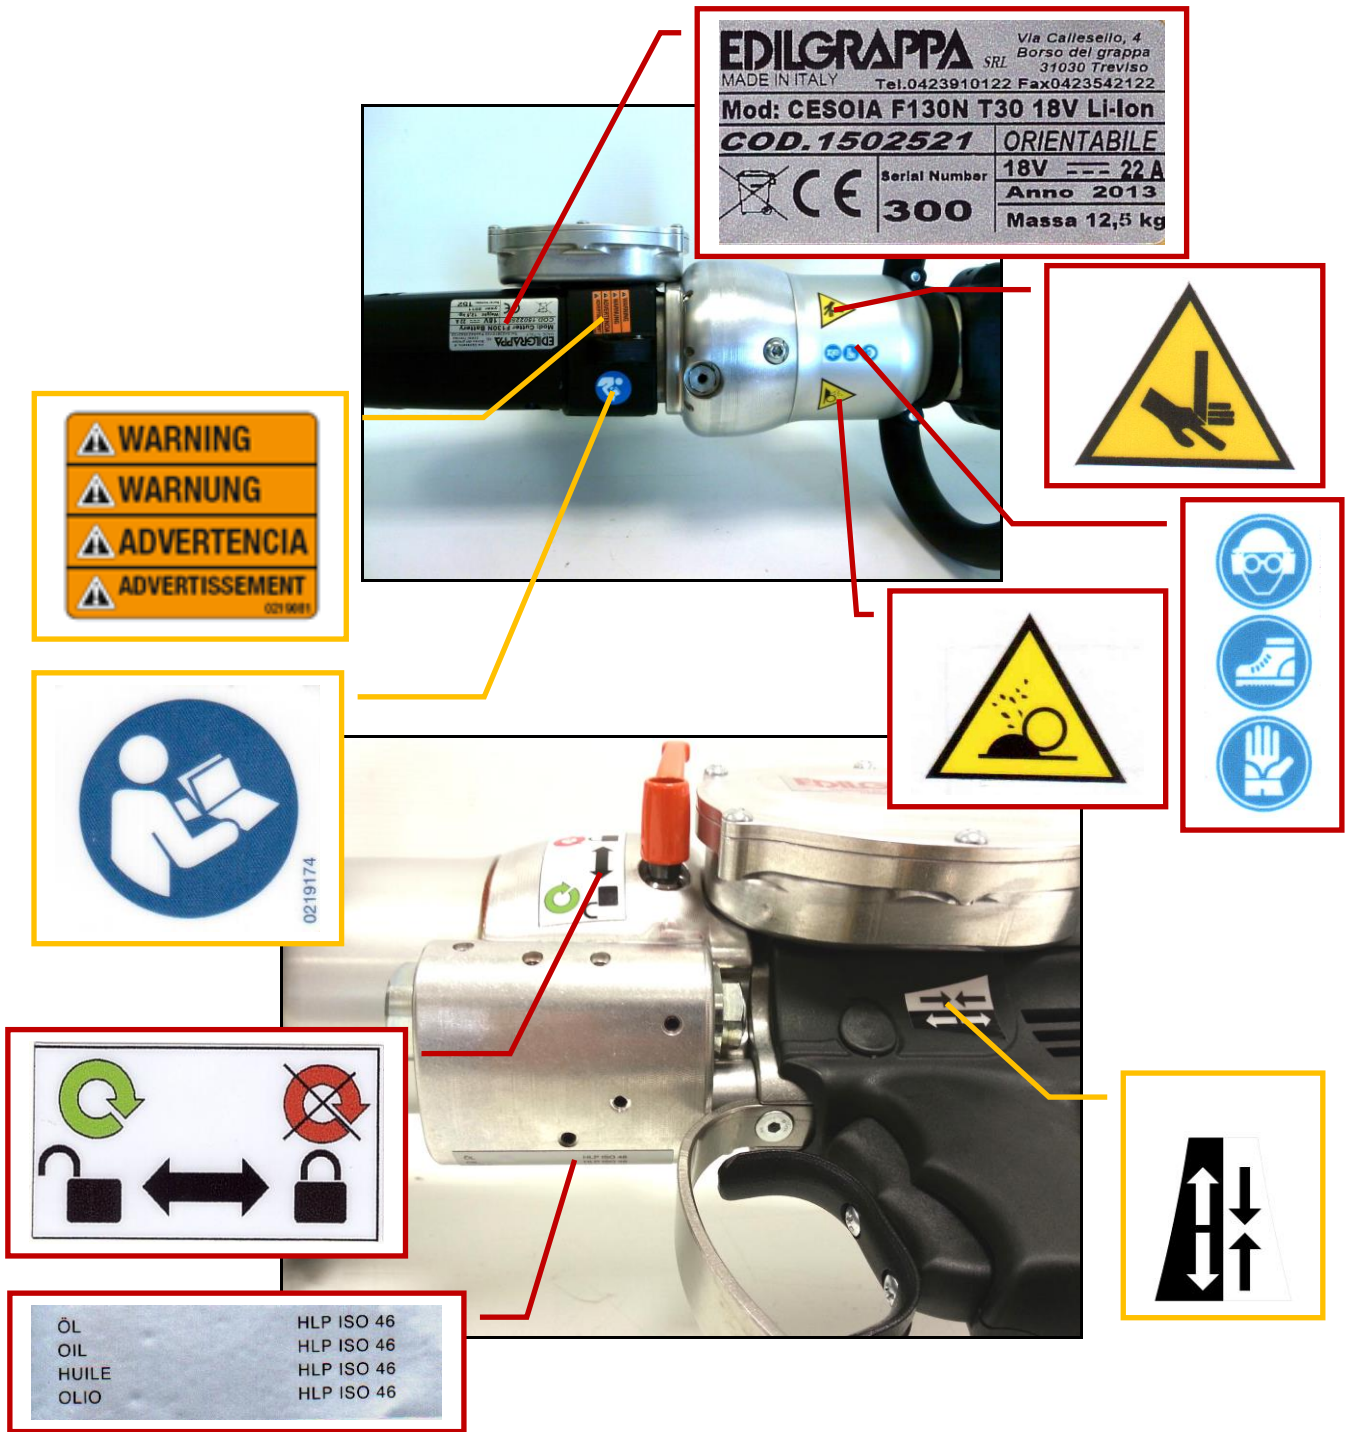

Observe the warnings on the plates and stickers. Failure to do so could lead to injury or death. **Make sure the plates and stickers are attached and legible.** If not, apply them or request the maker for replacements.



## **0.05 LIST OF ACCESSORIES INCLUDED IN THE SUPPLY**

- Case
- Use and maintenance instructions
- Declaration of conformity
- Warranty certificate
- Simple repair key, if appropriate

## **Chap. 1 REFERENCE LEGISLATION**

### **1.01 GENERAL**

This series of machines corresponds to the definition of machine to be found in the Machinery Directive 2006/42/EC. The electrical parts are compliant with the European “low voltage” directive 2006/95/EC.

Noise levels were measured according to CEI EN 60745-1 and CEI EN 60745-2-8 (no-load).

**OPERATORS MUST BE PROVIDED WITH SUITABLE PERSONAL PROTECTIVE EQUIPMENT.**

Vibration levels were measured according to CEI EN 60745-1 and EN ISO 5349.

The raw materials used and their processing during the product manufacturing cycle do not contain any toxic or hazardous materials referred to in Community Directives n° 2000/53/EC, n° 2011/65/EC (RoHS directive) and n° 2002/96/EC, as indicated in the relative raw materials test certificate.

## **Chap. 2 GENERAL SAFETY WARNINGS FOR ELECTRICAL TOOLS**

***Concerning the battery charger, consult the relative use and maintenance manual.***

*Failure to observe these warnings and instructions can lead to electrocution, fire and/or serious personal injury.*

**Keep all warnings and instructions for future consultation.**

Scrupulously observe the instructions contained in this manual and keep it in a suitable and accessible place. Keep the manual for future consultation until the machine is demolished. If the machine is sold, the manual must be given to the new owner.

Given the intended use and, therefore, the environments in which these tools can be used, scrupulously follow the instructions shown below.

### **2.01 SAFETY OF THE WORK STATION**

The workplace must comply with current occupational health and safety regulations.

*Untidy or badly lit areas can cause accidents.*

**a) Keep the work area clean and well-illuminated.**

*Electric tools generate sparks that can ignite gas and powders.*


**b) Do not use electric tools in explosive atmospheres, for example, in the presence of liquids, gas or flammable powders. Do not use on live electric lines, on pressure vessels or ducts, on vessels containing corrosive and/or toxic substances.**



- *Do not use naked flames or the like near the machine.*
- *Do not use the machine in areas subject to the risk of fire or explosion.*

Foresee the possible consequences deriving from the use of the equipment in order not to be involved or involve other people in potentially hazardous situations.

**c) Keep children and observers at a safe distance when using electric tools. *Any distractions can lead to loss of control.***



- Ensure other people remain at a safe distance when the machine is working (at least 5 metres). Cordon off the work area.
- Stop the machine if people and/or animals enter the work area.
- Periodically clean the machine and remove foreign bodies that could damage it or injure the operator.

## 2.02. ELECTRICAL SAFETY

**Concerning the battery charger, consult the relative use and maintenance manual.**

## 2.03 PERSONAL SAFETY




- The operator is responsible for safe machine operation.
- Only allow the machine to be used by suitably trained and authorised adults.

A When using an electric tool, operators must be alert, observe what they are doing and work with care. Do not use electric tools when tired or under the effect of drugs, alcohol or medicinals.

*A moment of distraction when using electric tools can cause serious personal injury.*

B Use personal protective equipment. Always protect the eyes.

**Protective equipment, such as dust masks, non-slip safety shoes, helmets or ear protectors, used in suitable circumstances, will reduce the risk of personal injury.**

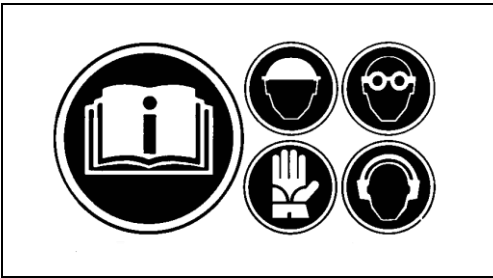

C Do not switch the tool on accidentally. Make sure the switch is in the “OFF” position before connecting the tool to the mains power supply and/or batteries before picking it up or before moving it.

*If electric tools are transported while the operator's finger is on the switch or if they are connected to the mains power supply with the switch in the “ON” position, accidents may occur.*

D Remove all adjustment tools and wrenches before switching on the tool.

*A wrench or tool fixed to a rotating element of an electric tool can cause personal injury.*

E Do not lose your balance. Always stay in a stable and balanced position. *This improves tool control in unforeseen situations.*

F Wear suitable clothing. Do not wear loose clothing or jewellery. Keep hair, clothes and gloves away from moving parts.

*Loose clothing, jewellery or long hair can get caught up in moving parts.*

G If devices for connection to dust extraction and capture systems are present, make sure they are correctly used and connected. *The use of these devices can reduce dust-related risks.*



Before using the machine, make sure the safety devices are in place and in good condition; replace the guards immediately if they develop faults or suffer damage.

## 2.04 USE AND MAINTENANCE OF ELECTRIC TOOLS

- a) Do not force the tool. Use the right tool for the job to be done. *Using the correct tool will assure improved and safer performance if used at the speed it was designed for.*
- b) Do not use the tool if it cannot be switched on and off from its switch. *Any tool that cannot be controlled with the switch is dangerous and must be repaired.*
- c) Disconnect the tool from the mains power supply and/or batteries before adjusting it, changing accessories and putting it down. *These preventive safety measures reduce the risk of the tool being operated by accident.*
- d) Keep electric tools out of the reach of children and do not allow inexperienced people or people who have not read these instructions to use them. *Electric tools are dangerous in the hands of inexperienced users.*
- e) Perform maintenance on electric tools. Check for misaligned or jammed moving parts, broken components and any other condition that could make the electric tool work incorrectly. If damaged, have the electric tool repaired before using it again. *Many accidents derive from poor maintenance.*
- f) Keep cutting tools sharp and clean. *Suitably maintained cutting tools with sharp edges are less likely to jam and are easier to control.*
- g) Use the cutting tool, accessories and heads, etc. in accordance with these instructions, bearing in mind operating conditions and the type of work to carry out.



The unforeseen use of electric tools could give rise to hazardous situations.

## 2.05 ASSISTANCE

Electric tools may only be serviced by a qualified technician using original spare parts.

*This ensures that they are kept in safe operating conditions.*

## 2.06 SPECIFIC OPERATING INSTRUCTIONS



**IMPORTANT:** When the oil temperature exceeds approx. 70°C, turn off the tool until the oil cools down.

- **As the machine has been designed for non-continuous use, sufficiently long pauses must be made to allow the oil to cool to room temperature.**

**FOR UNINTERRUPTED AND PROLONGED USE, CONSULT THE MAKER**

- Make sure the cooling circuits are unobstructed and the cooling surfaces clean in order to avoid dangerous overheating.

- Do not alter the calibration of the safety devices (maximum pressure valves)
- Do not service or clean the machine, or replace tools or guards while it is working.



Do not remove the guards installed on the equipment and accessories.

- Pursuant to the standards indicated and followed by the maker, the equipment components that also perform a safety function (insulators, guards, etc.) must not be repaired but replaced with original spare parts.
- Always make sure there are no traces of oil, grease or corrosive substances on the equipment (especially the grips).
- Use a damp cloth and soapy water to clean plastic components.



***DO NOT USE PETROL OR THINNER TO CLEAN THE MACHINE.***

- Store electric tools in a dry place that can only be accessed by authorised staff.

## Chap. 3 DESCRIPTION OF MACHINE

### 3.01 MACHINE COMPONENTS


This machine is fitted with a direct current motor.

The equipment comprises:

- a motor, - a hydraulic pump driven by the motor, - a rod actuator (piston) driven by the oil pressured by the pump, - a fixed head with tool.

Fig. 1 shows the main parts of the machine fitted with a motor, in particular:

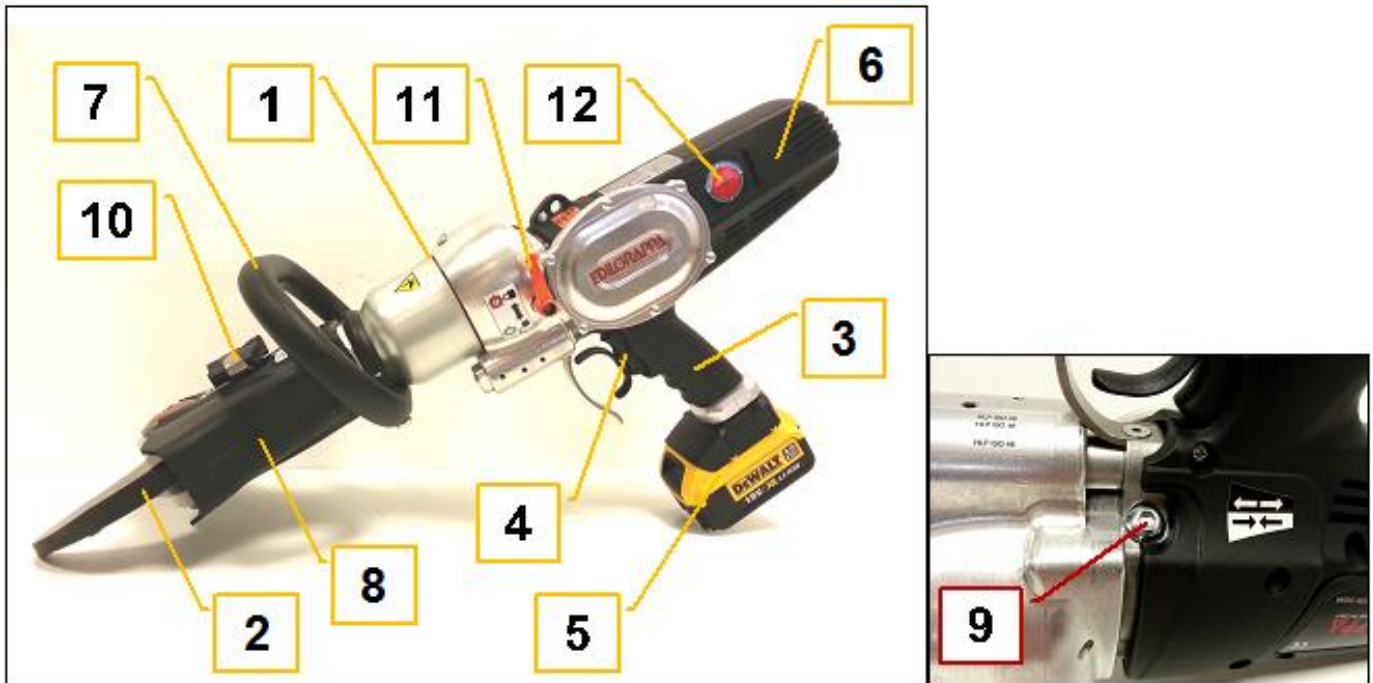

Fig. 1



1. cylinder with hydraulic components
2. head with tool
3. grip with on/off switch
4. pivoting trigger
5. battery
6. electric motor
7. handle
8. rubber guard
9. oil cap
10. led light
11. release lever for rotation
12. main switch

## Chap. 4 TECHNICAL SPECIFICATIONS

### 4.01 HYDRAULIC, MECHANICAL AND ELECTRICAL SPECIFICATIONS

Maximum force in notch [ t ]	33.7
Maximum operating pressure [ bar ]	550
Maximum blade aperture [ mm ]	130
Dimensions: Length X Width X H ( <i>with blades completely open and battery inserted</i> ) [ mm ]	665 x 253 x 400
Weight ( <i>with battery not inserted</i> ) [ kg ]	12.15
Guaranteed no-load LwA sound level (CEI EN 60745-1 and CEI EN 60745-2-8) [ dB ]	95
No-load operator Lpa (CEI EN 60745-1 and CEI EN 60745-2-8) [ dB ]	79
Vibrations (CEI EN 60745-1 and EN ISO 5349)	2.56 m/s <sup>2</sup>
<b>DRIVE SPECIFICATIONS</b>	
Input voltage [ V ]	18 
Current type	Direct
Rated input current [A]	22
Insulation class	III
Electrical power [ W ]	450
<b>CHARACTERISTICS OF BATTERY ( Code : 140.01004 )</b>	
Nominal voltage [ V ]	18
Charge capacity [ Ah ]	5.0
Current type	
Materials used for elements	Li-Ion
Dimensions H X Length [ mm ]	65 X 110
Weight [ kg ]	0.62

## Chap. 5 DELIVERY, COMMISSIONING AND SET-UP

### 5.01 DELIVERY

The machine is normally shipped and delivered inside a special hard case, well secured and in a stable position. All materials shipped are checked prior to delivery.

*Upon receipt, check the machine for any damage (breakages or major denting) caused during transport. If any damage is found, inform the forwarder immediately and write **"Accepted with reservations"** on the transport document.*



*In the event of damage, send a written complaint to the forwarder within 8 days of receipt.*

*Promptly inform Edilgrappa s.r.l. if major damage, caused during transport, is found upon receipt, or if any parts are missing.*

*It is also necessary to check the delivered materials against the detailed shipping list.*

The machine can be moved easily both when it is inside its special rigid case, using the upper handle, and by gripping its handle.



*Loads must be moved in compliance with current occupational safety regulations.*

After use, put the machine back into its case or place it on a stable surface, making sure this can withstand its weight.

### 5.02 CHARGING THE BATTERY

Refer to the battery charger use and maintenance manual.

Charge the battery before use as follows.

1- connect the battery charger cable to a socket.

2- push the battery down to the bottom of the guides. (fig. 2)

If this is done correctly the red LED at the front shines, indicating that the battery is under rapid charging. Recharging times vary according to the charge status of the battery according to the data indicated in the technical specifications.

3- Remove the battery from the appliance when it indicates that charging is ended.

4- Disconnect the power cable of the appliance after use.

5- Handle the appliance with care, do not knock it and separate the battery from the appliance if it is not powered by the mains power supply.



Fig. 2



## ATTENTION:

- Only recharge the battery under surveillance and do not leave the charger unguarded.
- Never attempt to connect another type of battery to the connection terminals as this can irreparably damage the battery charger.
- Even if the battery remains under charge after the red LED turns off, it continues to be charged at a low maintenance current without suffering any damage.  
Keep the battery in maintenance for at least an hour in order to mix the chemical compounds of the battery and improve their diffusion, thus lengthening its lifetime.

### 5.03 INSTALLING THE BATTERY

The type of battery used on these machines is provided with residual charge control. This system consists of a button (see ref. A in Fig.3 ) and a series of three leds (see ref. B in fig.3 ). When the button is pressed the leds are lit, indicating the charge status. If the leds do not light up the battery is completely flat. Before connecting the battery, check the charge status. Connect the battery to the shear using the guides in order to achieve a good electrical contact. Fig. 3

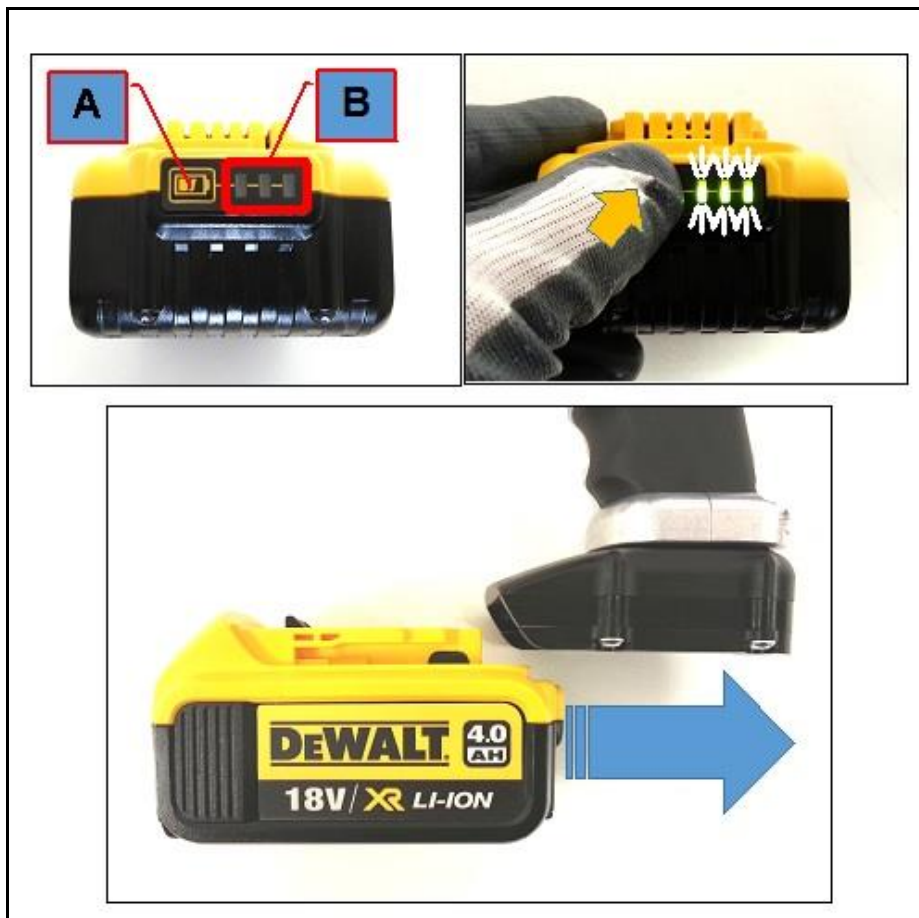


Fig. 3

## 5.04 COMMISSIONING

The only controls to perform concern:

- Machine integrity:

make sure that nothing happened during transport that could damage the insulation or mechanical parts. Make sure that the manual check valve is closed (paragraph 5.05).

- Completeness of supply:

check that all the supplied accessories are fitted (battery charged and installed).

- Oil level:

check the oil level and top up if necessary as per the instructions.

Before loosening the oil cap carefully read the instructions in chapter 6.

## 5.05 EQUIPMENT OPERATION

### 5.05.01 START-UP



***These tools generate a great deal of power.  
Danger of cuts or breaks to parts of the body.***

### SWITCHING ON (TOOL OPERATIVE):

To make the tool operative it is sufficient to hold down the main switch (Ref. A in fig.3A) for about 1.5 seconds (see sequence 1 in fig. 3A), until the leds light up (see sequence 2 in fig. 3A).

The lit leds indicate: tool operative.

At this point the electronic circuits are enabled and the tool can be activated.

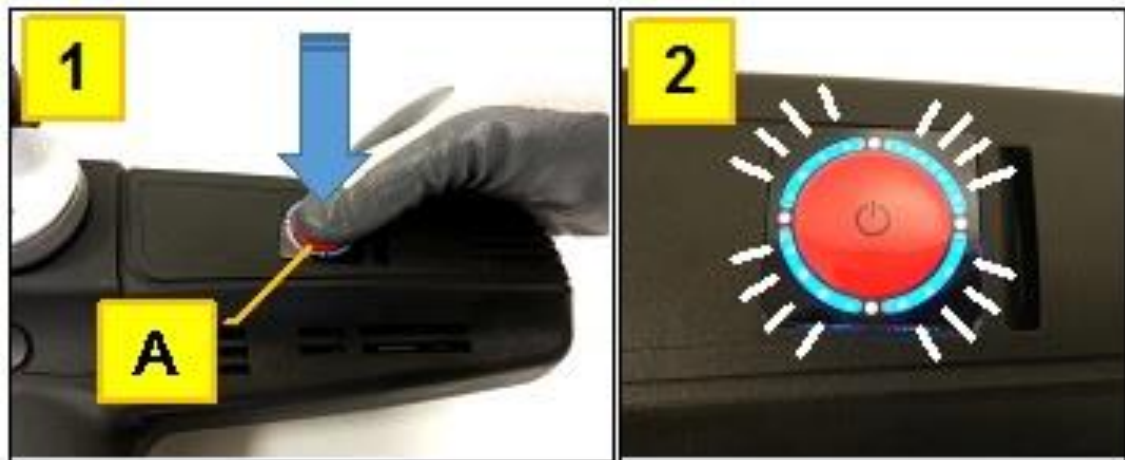


Fig. 3A

## SWITCHING OFF (TOOL NOT OPERATIVE):

To switch off the tool it is sufficient to hold down the main switch (Ref. A in fig.3B) for about 2 seconds (see sequence 1 in fig. 3A), until the leds light up (see sequence 2 in fig. 3A).

The unlit leds indicate: tool not operative.

At this point the electronic circuits are disabled and the tool cannot be activated.



Fig. 3B

### 5.05.02 CUTTING PHASE

Position the blade perpendicular to the axis of the work piece (fig. 4).



IMPORTANT: ***Position the blade so as to minimise the cutting thickness.***

***Non-perpendicular blade positions with respect to the workpiece increase cutting thickness.***

If the cutting thickness is greater than the limit established for the tool its blades may break.

After correctly positioning the blade on the workpiece, press the pivoting trigger and hold it down until cutting has been completed.

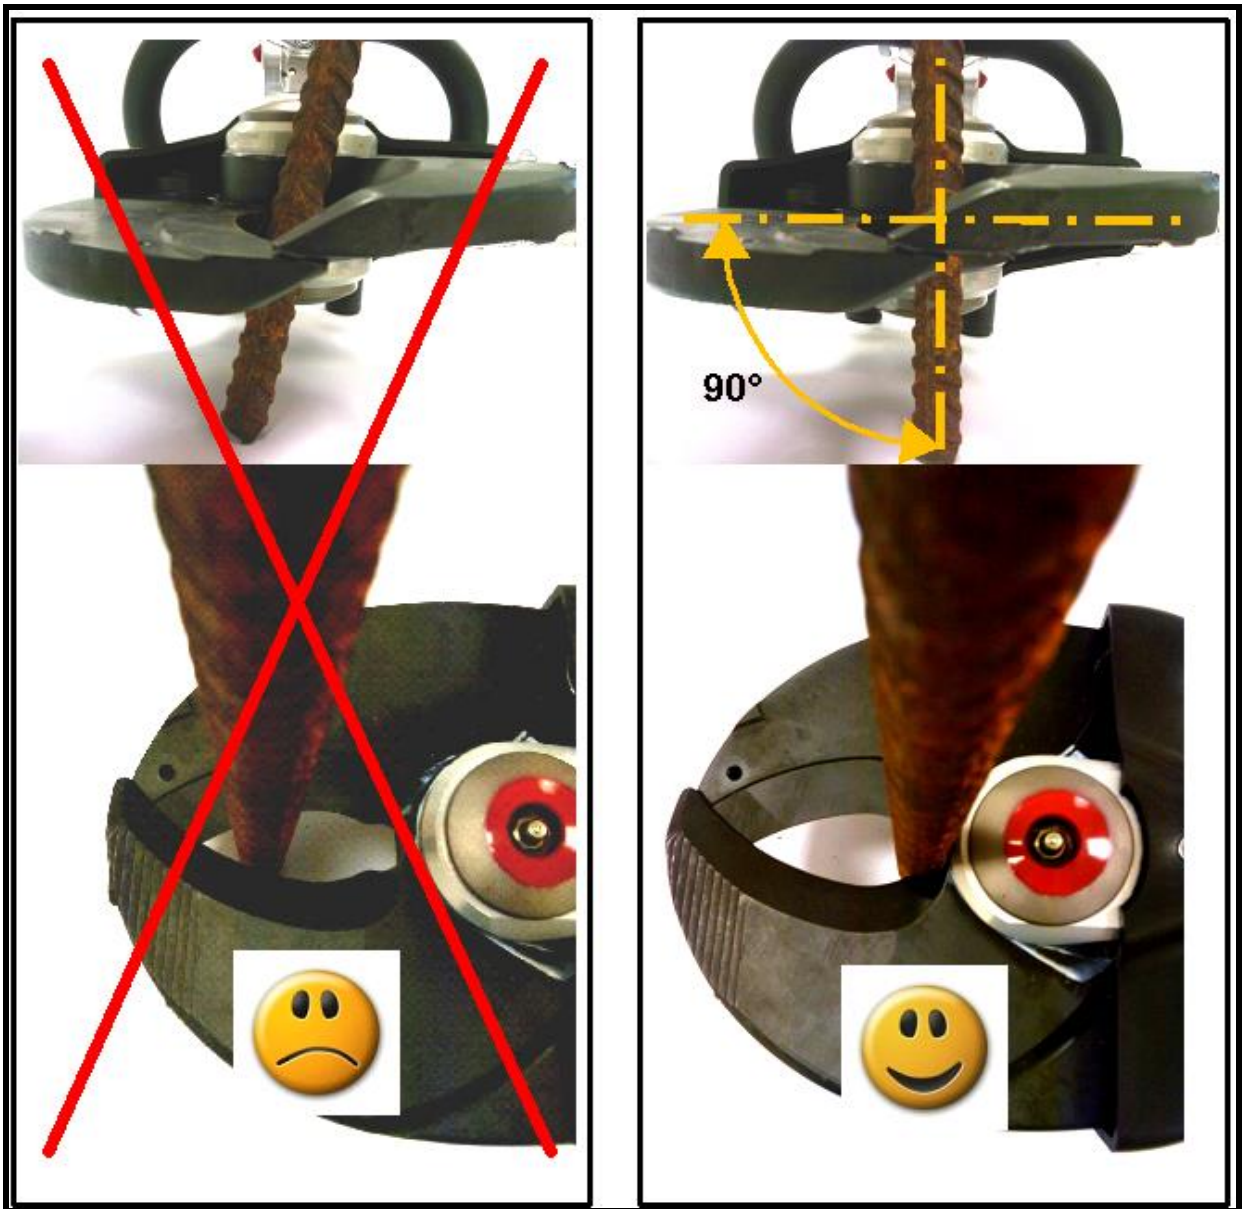


Fig. 4

### 5.05.05 ADJUSTING THE HEAD


The head of this machine can be adjusted (rotated by 180°) to help the operator during positioning and subsequent processing.

To adjust the head, simply shift the release lever (ref. A in fig. 4A), as indicated by the arrow in sequence 1 to block the head; vice versa shift it as indicated by the arrow in sequence 2 to release the head and make its adjustment possible.

Once the head has been released it can be adjusted by means of the handle (ref. B in fig. 4A), as indicated by the two arrows.

After having brought the head into the desired position, block the rotation system as indicated in sequence 1 in fig. 4A in order to be able to continue working. With the rotation system released the machine does not transmit power to the blades.

Fig. 4A

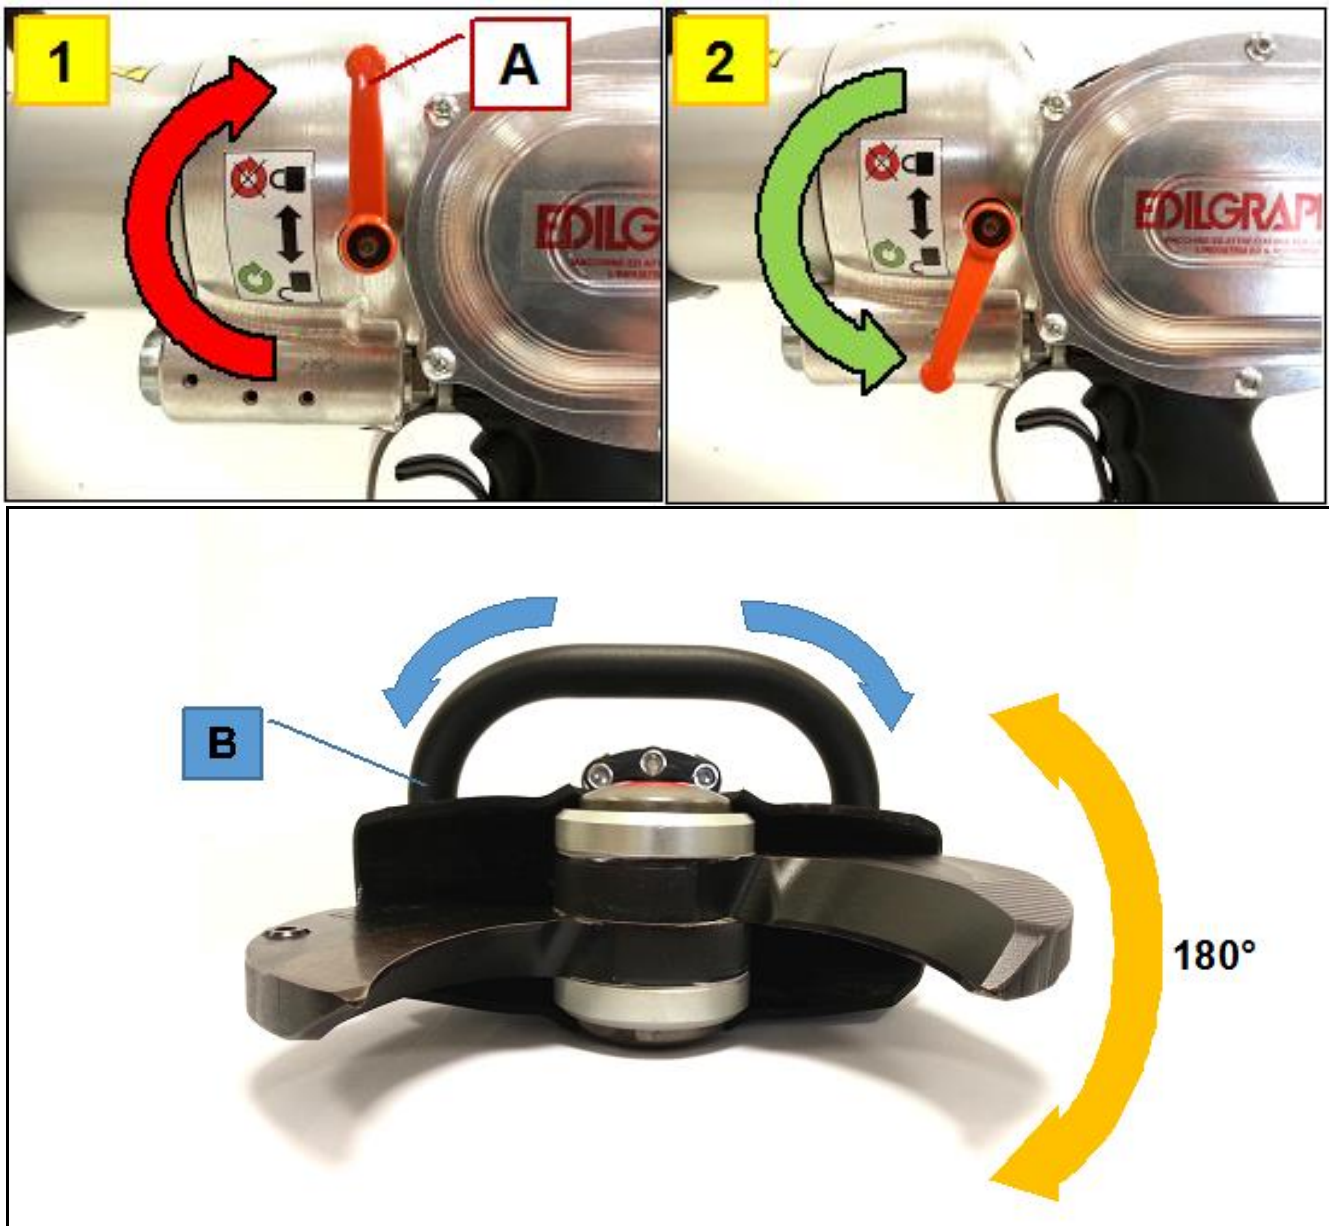





Adjusting the head with the tool disconnected and not working. Hold the grip (ref. B in fig. 4A) and handle (ref. 3 in fig. 1) firmly, without touching the pivoting trigger, and move the head to the required position.



## 5.06 ON/OFF TRIGGER

The on/off trigger features the two positions indicated in fig. 2

- Position 1: The piston moves for the blade opening phase.
- Position 2: The piston moves for the cutting phase.

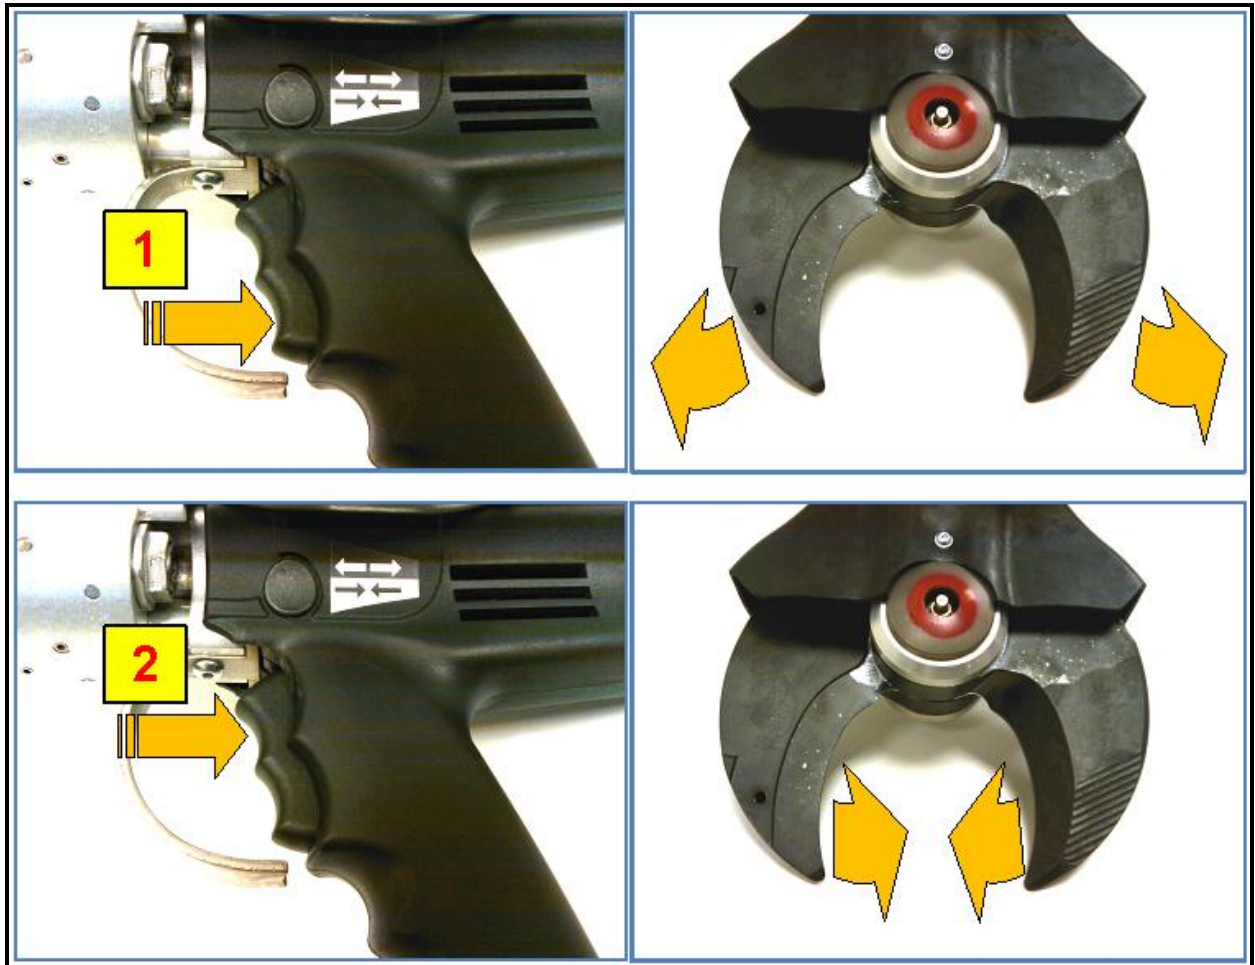


Fig. 2

## 5.07 RUNNING DOWN THE BATTERY

Use the machine until you can begin to hear a decrease in motor performance.  
Do not use the battery any further so as not to ruin it, reduce its useful lifetime or overheat it.

### **Charge the battery before it runs down completely.**

Wait for it to cool down before charging.

## 5.08 FORESEEN USE AND RESIDUAL RISKS

The machine must only be used to cut items in metal, such as rods, sections, small pipes, bearing in mind the data listed in the technical specifications. It is used in various sectors, including servicing and demolition. The machine cannot be used for cutting parts not specified above.

Any use other than that expressly indicated shall be considered as improper and therefore not permitted. Edilgrappa S.r.l. declines all liability for any improper use of the machine and for any modification or change made to it.

Operators must observe the instructions in this manual in order to minimise the risk of accidents. In particular, they must pay attention when working in conditions that could cause:

- Possible burns from overheated metal parts;
- Injury due to incorrect positioning or inadequate lifting or moving;
- Injury caused by splinters discharged from the work piece.

People remaining in the vicinities of the machine while it is working are subject to the following risks:

- Flying debris (dangerous objects, etc...);

Hand/arm vibration. Standard applied: EN ISO 5349

The mechanical vibrations transmitted to the hands and arms generate a risk to the health and safety of workers, especially as concerns vascular, osteoarticular, neurological and muscular ailments.

The Employer is responsible for assessing the risk generated by mechanical vibrations, pursuant to Directive 2002/44/EC.

Operating temperature	-40° - +50° C
-----------------------	---------------




- ***It is strictly forbidden to use the machine for purposes other than those indicated in this installation and maintenance manual.***
- ***It is forbidden to use the machine in areas subject to the risk of explosion.***



## 5.09 SAFETY DEVICES

The machine is fitted with a safety device preventing contact with moving parts (levers and thrust fork) during the cutting phase; it also ensures protection against projected splinters and dangerous objects in the event of breakage of the thrust levers. It is a protective plastic guard secured to the machine with 2 screws (part 1 in fig. below).

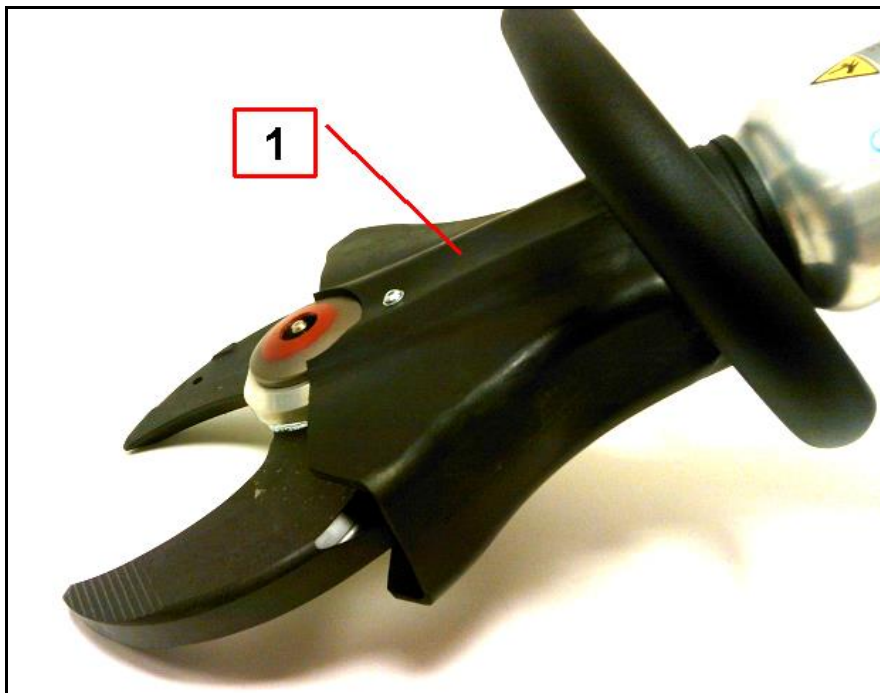

***Never tamper with the safety devices***

## Chap. 6 ROUTINE MAINTENANCE



1. *All maintenance, inspection and cleaning operations must be performed with the power supply disconnected and the machine cool (see the person responsible in the maintenance schedule);*
2. *Maintenance operations must be performed in a suitable place according to current safety regulations;*
3. *Carefully clean the machine before starting maintenance work (see paragraph 8.01);*
4. *Wear suitable personal protective equipment while performing maintenance work.*



***AFTER MAINTENANCE WORK, MAKE SURE THE GUARDS ARE PUT BACK INTO THEIR CORRECT PLACE.***

## Periodic maintenance schedule

<b>Frequency</b>	<b>Operation</b>	<b>Method</b>	<b>Person in charge</b>
EVERY 8 HOURS	•CHECKING THE INTEGRITY OF THE MACHINE	Visual	Operator
EVERY 1600 HOURS	•CHANGING THE OIL	Para 6.01	Maintenance person
EVERY 8 HOURS	•CHECKING THE TIGHTNESS OF NUTS AND BOLTS	Para 6.02	Operator
EVERY 8 HOURS	•CHECKING BLADES FOR WEAR	Para 6.03	Operator
/	•REPLACING THE BLADES		Maintenance person
EVERY 8 HOURS	•CHECKING GREASING OF CENTRAL PIN	Par.6.06	Operator



In case of doubts during the maintenance interventions, to order spare parts or for complex maintenance work, contact your authorised retailer.

### 6.01 CHANGING AND TOPPING UP THE OIL

The oil change or top up must be performed so as to prevent impurities from contaminating the oil or entering the tank. Impurities in the oil can irreversibly damage the hydraulic parts.



**ALWAYS MAKE SURE THE OIL CONTAINS NO IMPURITIES.  
DO NOT USE DIRTY TOOLS.  
DO NOT WORK IN DUSTY AREAS.**

### CHANGING THE OIL:



**USING A SUITABLE DISPENSER, PREPARE THE CORRECT QUANTITY OF OIL (APPROX. 0.5 l) TO POUR INTO THE TANK.  
LEAKING OIL CAN CAUSE SHORT CIRCUITS, FIRE AND EXPLOSIONS.**

1. Place the machine horizontally in a stable position on a work surface with the magnetic cap facing upwards. Place a basin under the machine to catch any oil leaks;
2. Unscrew the magnetic cap (see part 9 in para 3.01) and remove any residues with the piston in its retracted position;
3. Totally drain the oil tank using a suitable extraction system (used oil extraction pump) so that no oil can leak into the machine;
4. Slowly pour in the correct quantity of oil (approx. 0.5 l) using suitable equipment (e.g. a funnel). Only use new or clean recommended oil (as indicated on the next page);
5. Fill up to the upper rim of the hole;
6. Put back the oil cap and tighten slightly;
7. Perform some piston strokes to vent the large air bubbles;
8. Move the piston to its maximum extension and rapidly start and stop the motor several times;
9. Complete filling;
10. Put the oil cap on and tighten.

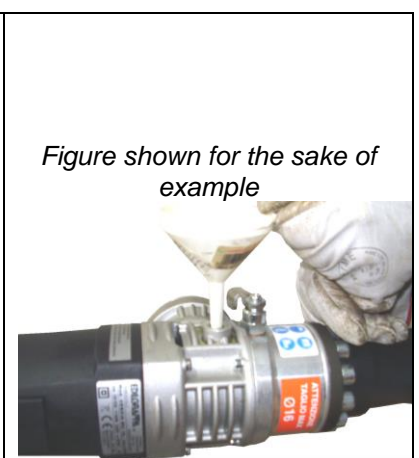



Figure shown for the sake of example

Fig. 5

## TOPPING UP THE OIL:



Before unscrewing the magnetic cap to check the oil level, make sure the piston is fully extended and, if necessary, pull it out (see fig. 4C). If this is not done the oil may leak, air bubbles may form and/or the oil level may be incorrectly measured, thus causing the machine to operate incorrectly.

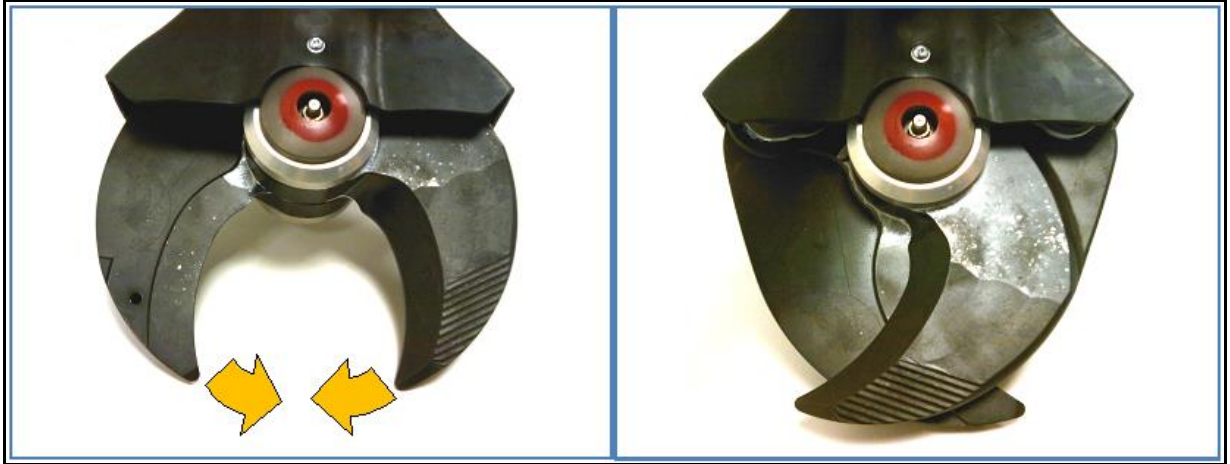

**Fig. 4C**

Only after completing the above operations, proceed as shown below:

1. Place the machine horizontally in a stable position on a work surface with the filling hole facing upwards. Place a basin under the machine to catch any oil leaks;
2. Unscrew the magnetic cap (see part 9 in para 3.01) and remove any residues;
3. Check the amount of missing oil;
4. Slowly top up to the upper rim of the hole with recommended new and clean oil using suitable equipment (e.g.: a funnel as indicated in fig. 5);
5. Put the oil cap on and tighten.

Maximum quantity: 0.5 l.  
Type of hydraulic oil: ESSO NUTO H46 or  
approved equivalents HLP46  
according to DIN 51 524 MIL-H 17672 C



When demolishing the machine or parts of it (oil, plastic, etc.) observe the regulations in force in the country in which this operation is performed.

## 6.02 CHECKING SCREWS

Periodically, or every day in the event of frequent or prolonged work, make sure that all the screws are perfectly tight.



FAILURE TO TIGHTEN LOCKING SCREWS CAN CAUSE SERIOUS DAMAGE.

## 6.03 CHECKING THE BLADES

The use of worn blades decreases the potential of the machine and can needlessly overheat the motor.

**REPLACE AS SOON AS YOU NOTICE THEY ARE WORN.**

**To replace the blades, apply to your nearest service centre or to the Maker.**

## 6.04 HYDRAULIC COMPONENTS

### 6.04.01 MAX. PRESSURE VALVE INCORRECTLY ADJUSTED

In case of a pressure drop for a reason that cannot be directly identified, have a maintenance person or the maker check the maximum pressure valve is clean and calibrated.

## 6.05 MAIN CHECKS ON THE MOTOR

- Keep the surfaces of the motor clean
- Keep the motor cooling slits clean and unobstructed
- Check the brushes for wear: replace with original material.

## 6.06 GREASING OF CENTRAL PIN

Periodically or daily (in the event of frequent or extended works) check that the central pin is appropriately lubricated.

To grease the pin, use lithium-based water-repellent grease and apply it with a manual grease gun (see example in fig. 6), pumping the grease into the grease nipple (indicated by the arrow in fig. 6).

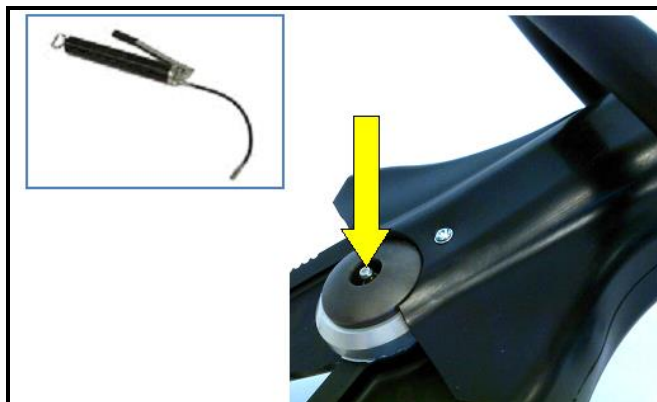


Fig. 6

## Chap. 7 TROUBLESHOOTING

### 7.01 GENERAL

Faults can be divided into three sections:

1. faults on the motor
2. faults on the head
3. faults not closely connected with the machine

**ALL OPERATIONS MUST BE PERFORMED BY QUALIFIED PEOPLE IN OBSERVANCE OF SAFETY REGULATIONS.**

**WORK ON THE MACHINE DURING THE WARRANTY PERIOD MUST BE PERFORMED AT THE MAKER'S FACILITY**

Remedies marked with the letter **R** require the assistance of the Authorised dealer.  
Remedies marked by the letter **M** require the intervention of the Maintenance man.  
Remedies marked with the letter **O** can be performed by the Operator.



### 7.02 TROUBLESHOOTING THE MOTOR

FAULT	POSSIBLE REASON	POSSIBLE REMEDY	PERFORMED BY
MOTOR DOES NOT START	Battery broken	Replace	O
	Motor	Replace	R
	Switch	Replace	R

FAULT	POSSIBLE REASON	POSSIBLE REMEDY	PERFORMED BY
ELECTRIC MOTOR OVERHEATED	Internal faults	Replace	R
	Battery overheated	Wait for it to cool down	O
	Windings dirty	Clean	M
	Ventilation slits obstructed	Clean	O
	Fan broken	Replace	R
	Motor supports worn	Replace	R
	Mechanical faults on the head	Overhaul	R
	Manifold worn	Replace	R
	Brushes worn	Replace	R

### 7.03 TROUBLESHOOTING THE HYDRAULIC COMPONENTS

FAULT	POSSIBLE REASON	POSSIBLE REMEDY	PERFORMED BY
OUTWARD STROKE DOES NOT BEGIN	Damaged cursor	Replace	R
	Max. pressure valve dirty	Consult the Maker	/
	Trigger damaged	Replace	M
	Oil tank empty	Fill	O
MOTOR DOES NOT STOP	Earth cable interrupted	Repair	M
	Earth cable rusted	Clean	O
OUTWARD STROKE INCOMPLETE	No oil	Top up	O
OUTWARD STROKE DISCONTINUOUS	Air bubbles in the hydraulic circuit	Vent	O
	Max. pressure valve open due to built-up dirt	Consult the Maker	/
	Pump faulty or dirty	Replace	M
	Piston gasket faulty	Replace	M
	Pump O-ring	Replace	M
NO FORCE	Oil hydraulic pump faulty	Replace	M
	Dirt on oil hydraulic pump valve	Replace	M
	Max. pressure valve open	Replace	M
	Piston gasket worn	Replace	M
	Pump O-ring broken	Replace	M
OIL LEAKS FROM TANK COVER	Membrane faulty	Replace	O

## **Chap. 8 STORAGE AND RESTARTING**

### **8.01 STORAGE**

In case of long periods of inactivity, proceed as follows:

#### **8.01.01 ELECTRIC MOTOR**

- Clean all the internal electrical parts (rotor, stator, cooling circuit) with compressed air

**DO NOT USE CONDUCTIVE OR FLAMMABLE LIQUIDS TO CLEAN INTERNAL ELECTRICAL PARTS**

- To clean the outside of the machine, if necessary, use a cloth dampened in soapy water and then dry thoroughly.
- Check the following are in good condition:
  - insulation
  - switches
  - brushes and manifold
  - clean the stator, rotor, cooling circuit and fan with compressed air

#### **8.01.02 CYLINDER AND HYDRAULIC COMPONENTS**

Before performing these operations, see the relative instructions in Chap. 6.

- Check the hydraulic oil and top up or, if necessary, replace.
- Clean the magnetic cap and check the membrane.
- Check for any oil leaks.
- Tighten the screws.

Store the equipment in a clean and dry place accessible only to authorised personnel.

### **8.02 RESTARTING**

Before performing these operations, see the relative instructions in Chap. 6

- Check the oil tank is full and top up if necessary
- Remove any traces of oil remaining after topping up or applied to protect metal parts from the grip and other parts that can be gripped.

#### **ELECTRIC MOTOR**

- Make sure the battery, the battery charger and the machine body are not damaged.
- Commission the machine as described in Chapter 5 of this manual.
- Start the machine a few times and make sure no operating faults occur.

**ELIMINATE ANY FAULTS BEFORE STARTING WORK.**

## Chap. 9 DISPOSAL

When disposing of the machine, the various materials must be separated.  
The tool comprises the following groups of materials:

- ferrous materials
- copper
- plastic

Observe current legislation when sorting, storing, recycling or disposing of these materials.  
Only for EC countries:



This electric tool is marked with the following recycling symbol. Consistently with Directive 2002/96/EC on waste electrical and electronic equipment (WEEE), at the end of its useful lifetime, this product must be disposed of separately in suitable collection areas and not together with normal domestic waste. A benefit for the environment to help everyone.

## Chap. 10 SPARE PARTS AND ACCESSORIES CATALOGUE

### 10.01 ORDERING INFORMATION

For technical assistance and spare parts, both during and after the period of warranty, quote the data indicated on the ID plates and the serial number punched on the tool body (fig. 14)



Fig. 14

Orders for spare parts must be accompanied by the following information:

1. Type of equipment
2. Serial number
3. Part number, revision status and position in exploded drawing
4. Quantity
5. Revision status indicated on the back cover of the manual.


The Manufacturer can only supply the appropriate spare part if the required data is complete, since subsequent improvements may have entailed structural variations to the equipment and therefore to the spare parts.



## 10.02 MECHANICAL AND HYDRAULIC COMPONENTS

Exploded diagrams, code lists and wiring diagrams can be found on the following pages.

### SHEAR BLADES CUTTER F130N T30 18V P/N 150.02521

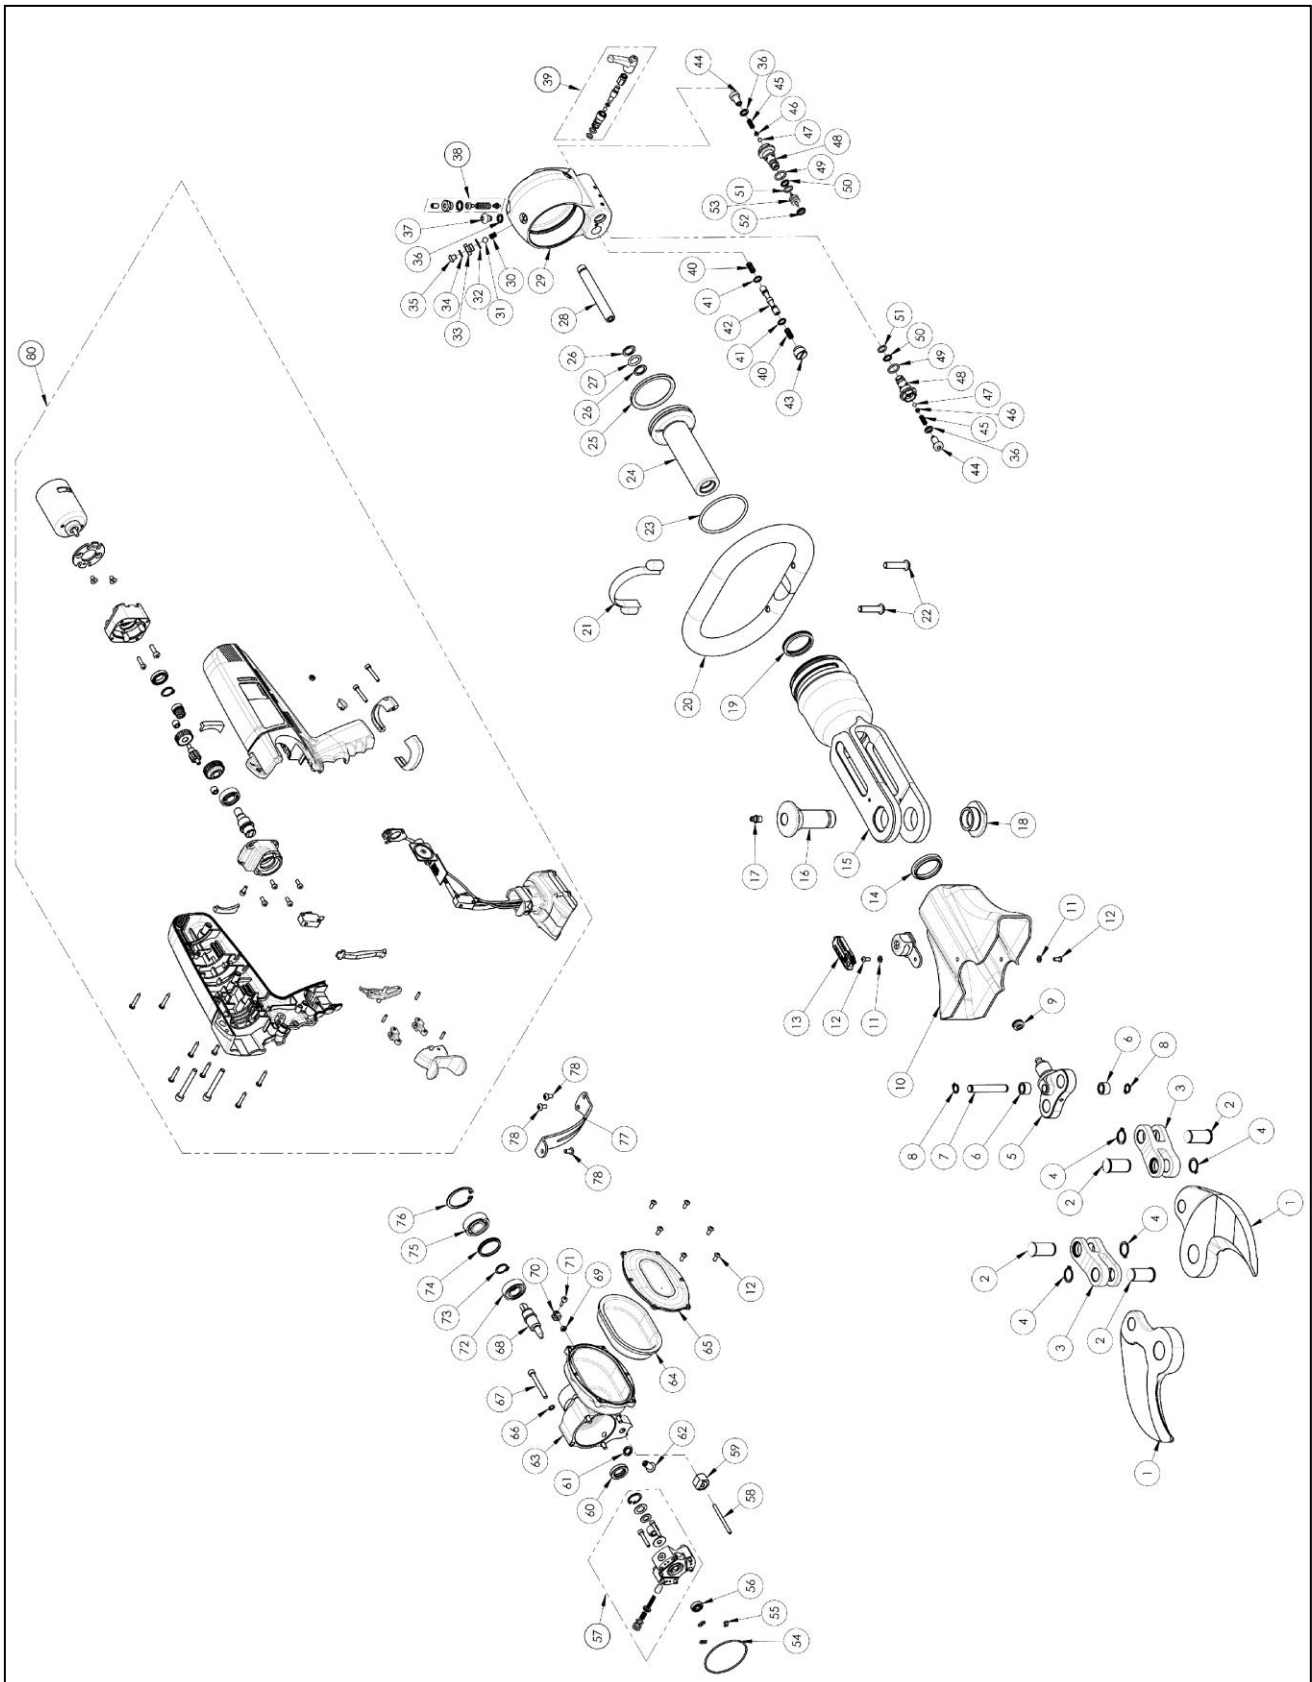

**SHEAR BLADES CUTTER F130N T30 18V P/N 150.02521**

<b>Position</b>	<b>Part n.</b>	<b>Description</b>	<b>Q.ty</b>
1	110,06057	Blade for F130N	2
2	110,05984	Blade pin	4
3	110,05788	Jaw link	2
4	160,00422	Seeger ring for shaft D=17 UNI 7435	4
5	110,05789	Blades yoke	1
6	110,04836	Positioning bushing for cutter and combi	2
7	110,05137	Rotation block pin for cutter and combi	1
8	160,00393	Seeger ring for shaft D=10 UNI7435	2
9	130,00556	CSC seal 158/1 15x8x6.5	1
10	110,06056	Blade rubber guard	1
11	150,03301	Support lamp assembly LED	1
12	160,00319	Washer M4 UNI 6592 Zn	2
13	160.03040	Hex socket button head M4x10 10.9 UNI 7380 zinc plated	8
14	140,01081	LED light	1
15	130,01865	Scraper RAD 36 44.7x36x5.4	1
16	110,06807	Cylinder	1
17	110,08303	Kingpin for MDC300	1
18	160,00256	Greaser M8x1	1
19	110,08304	Locking ring for kingpin for MDC300	1
20	130,01858	CSC seal 4436 44x36x6.5	1
21	150,01643	Handle for cutter and combi tool	1
22	160,03064	Hex socket button head M8x35 UNI 7380 zinc plated	2
23	150,01697	Locking handle bracket for cutter and combi	1
24	130,00118	O-ring 231 66.27x3.53 90 SH	1
25	110.05790	Cutter and combi plunger	1
26	130,00489	NPU seal 065 65x54x4.2	1
27	130,02001	Backup ring BRC 13x18.2x1.4	2
28	130,02002	O-ring 13.5X3 80SH	1
29	110,04821	Port tube oil for F130N/MDC300	1
30	150,02523	Assembly cylinder MDC300 T30	1
31	110,00037	Spring D.0.9xe6.5x4.75xL8.5	1
32	160,03171	Steel ball D.7	1
33	160,00361	Copper flat washer 10.4X13.8X1.5	1
34	110,04147	Threaded cap M10 x1 with M6 hole	1
35	160,03168	Copper flat washer 6.3X9.8X1.4	1
36	160,03161	Hex socket button head M6x6 INOX A2 ISO 7380	1
37	170,00006	Copper flat washer 8X12x1.4	3

Position	Part n.	Description	Q.ty
38	110,05226	Screw M8x9.4 terminal turned D.6.4x3	1
39	150,03172	Valve calibration for machine battery BO 36V	1
40	150.02630	Unlocking valve assembly	1
41	160,01036	Spring D.1xe7x6,25xL14 grounded	2
42	130,00242	Quad ring seal 8.2x1.78	2
43	110,01903	Control valve spool	1
44	110,02347	Setting headless screw	1
45	110,01518	Push spring screw for check valve	2
46	110,01546	Spring D.0.7xe5.7x7.5xL13 grinded	2
47	110,01581	Stell ball guide for check valve	2
48	160,00062	Steel ball 3/16 D. 4.76	2
49	110,06055	Hex. threaded cap for check valve	2
50	130,00063	O-ring 13x2 90 SH	2
51	130,00249	Backup ring BR 611	2
52	130,00015	O-ring 9.25x1.78	2
53	130,00305	EGR seal 0120 6.07x12x2	1
54	110,01383	Directional valve shaft	1
55	130,00425	O-ring 036 60.04x1.78	1
56	130,00017	O-ring 010 6.07x1.78	3
57	160,00078	Ball bearing 16x5x5 625 C3	1
58	150,00903	Pump ass.y	1
59	110,06049	Pin threaded for MDC300 battery	1
60	110.06040	Retaireng for spring	1
61	160,00083	Oil seal 15x25x5	1
62	160,03046	Bonded seal 006 8.31x13.34x1.22	1
63	150,00923	Magnetic filter cap	1
64	150,01644	Assembly tank oil for MDC300 T30	1
65	130,00642	Diaphragm	1
66	110,05977	Diaphragm housing lid	1
67	160.00410	Washer schnorr M5 zinc plated	4
68	160,00811	Hex. socket cil. head screw M5x45 UNI 5931 zinc plated	4
69	110,04422	Eccentric shaft	1
70	160,00207	Nut M4 UNI 5588 Zinc plating	1
71	110,02539	Entrainment spool cam	1
72	110,06751	Entrainment pin M4	1
73	160,01044	Ball bearing R-S 32x15x9 6002 ZZ C3	1
74	160,00396	Seeger ring for shaft D=15 UNI 7435	1
75	110,04625	Ball bearing spacer	1
76	160,03039	Ball bearing 35x15x11 6202 ZZ	1
77	160,03045	Seeger ring for hole D=38 UNI 7437	1

<b>Position</b>	<b>Part n.</b>	<b>Description</b>	<b>Q.ty</b>
78	110,07752	Protection for handle cut pedals battery 18V	1
79	160,00937	Hex socket button head M5x10 10.9 UNI 7380 zinc plated	3
80	150,03361	Assembly engine machine battery DE 18V JE	1

# CE Declaration of conformity

**Maker:** EDILGRAPPA srl  
**Machines and equipment for the building trade, industry and rescue**  
Via Callesello, 4  
31030 Borso Del Grappa (TV)

**Name and address of person authorised to draw up the technical brief:** Giacomo Rorato  
Via Callesello, 4  
31030 Borso Del Grappa (TV)

**General name:** Electric tool with cordless motor  
**Function:** For cutting cables, ropes, metal parts such as rods, sections, small pipes.  
**Type:** Cordless combi tool  
**Model:** **CORDLESS F130N T30**  
**Trade name:** **CORDLESS SHEAR F130N T30 18V Li-Ion with adjustable head**

**Serial n°:** \_\_\_\_\_

**Year of construction:** \_\_\_\_\_

DECLARES THAT THE ABOVE-MENTIONED EQUIPMENT IS COMPLIANT WITH THE FOLLOWING DIRECTIVES:

Machinery Directive	2006/42/EC (Proc. Annex VIII)
EMC Directive	2004/108/EC
RoHS Directive	2011/65/EC
WEEE Directive	2002/96/EC


**COMPLIES WITH : UNI EN 13204:2012 CATEGORY F**

Place: Borso Del Grappa TV

Date: \_\_\_\_\_

Signature

PAOLO MAZZARO  
(Legal representative)

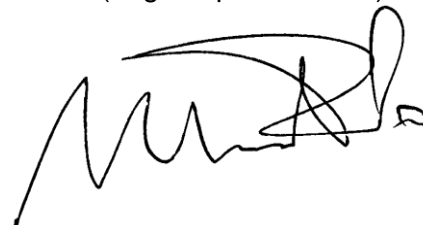





**Kontakt:**

kundeservice@watter.dk

Tlf. +45 70261600

[www.watter.dk](http://www.watter.dk)